

Trouble Shooting:

- 1.The BIOS in the mother board.(Basic Input/Output System).
- 2.The hardware equipment.(Keyboard.Mouse)
- 3.Software.OS(Operating System)

SITUATION	SOLUTION
Mouse Hanged	<ul style="list-style-type: none"> • Check whether the correct mouse driver was installed. • Change to other mouse. (PS/2 mouse only for user side) • Connect the mouse to PC directly. • Change to the PC port. • Try to select other port and then switch back.
Keyboard Hanged	<ul style="list-style-type: none"> • Change to other keyboard. • Connect the keyboard to PC directly. • Change to the PC port. • Try to select other port and then switch back.
Improper Operation	<ul style="list-style-type: none"> • Do not move keyboard, mouse or select PC if the initial turn-on operation procedure is not completed. • Reboot after the PC is turned off for 5 seconds later. • Try to select other port and then switch back.

SPECIFICATIONS:

Function	SPECIFICATION
Model (PS/2)	XG2
Description	2 PCs to 1 User
Case design	PLASTIC CASE
PC selection method	
Keyboard Hot Keys	Yes
Scan Rate	5 sec / 10 sec / 15 sec 20 sec / 25 sec / 30 sec
PC side connectors	HD-15M x 2 MD-6M x 4
Console side connector	HD-15F x 1 MD-6F x 2
Transmission Distance	
PC side to Switch	16ft (5m)
Console side to Switch	10ft (3m)
CABLE	Built-in with 4ft (1.2m) Coaxial cable
Vertical Frequency	43-120Hz
Max. Resolution	1600 x 1200
Video Bandwidth	200MHz
Horizontal Frequency	30-100KHz

Limited Warranty:


IN NO EVENT THE DIRECT VENDOR'S LIABILITY EXCEED THE PRICE PAID FOR THE PRODUCT FROM DIRECT, INDIRECT, SPECIAL, INCIDENTAL,OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THE PRODUCT, DIST, OR ITS DOCUMENTATION.

The direct vendor makes no warranty or representation, expressed, implied, or statutory with respect to the contents or use of this documentation, and specially disclaims its quality, performance, merchantability, or fitness for any particular purpose. The direct vendor also reserves the right to revise or update device or documentation without obligation to update. For further inquires please contact your direct vendor.

Preventing Radio & TV Interference:

WARNING!!! This equipment generates, uses, and can radiate radio frequency energy and if not installed and used in accordance with the instructions MANUAL, may cause interference to radio communications. It has been tested and found to comply with the limits for a Class A computing device pursuant to Subpart J of part 15 of FCC Rules, which are designed to provide reasonable protection against such interference when operated in a commercial environment. Operations of this equipment in a residential area is likely to cause interference in which case the user at his own expense will be required to take whatever measures may be required to correct the interference.

INSTALLATION:

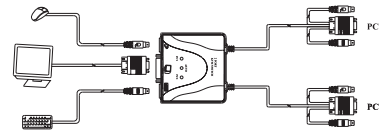

OPERATION:

- 1.First turn on the monitor followed by the PCs.
- 2.Make sure each PC is boot-up completely before switching the KVM Switch.

To activate the scan mode(Auto status):

*Hot Key operation :

To deactivate the scan mode (Manual status):


*Press on the keyboard.

To select PC:

*Hot Key operation:



2 PORT AUTO mini KVM with Built-in cables

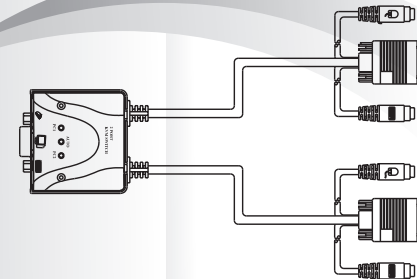

USER'S MANUAL

XG2

Please read this manual thoroughly and follow the instruction procedures to prevent any damage to the CPU SWITCH and or the connecting devices.

LED:

After the computers are turned on, the front panel shows:
PC1/PC2 LED : The LED will be lit for the PC which is selected or scanned.
AUTO LED : Lit when in Auto Scan mode.

Adjust the SCAN TIME:

1. 5 sec Default setting .
2. Press into the Auto Scan mode.
3. Press or to choose the scan rate.

SCAN RATE	Num Lock LED	Caps Lock LED	Scroll Lock LED
5 sec.	OFF	OFF	ON
10 sec.	ON	OFF	OFF
15 sec.	ON	OFF	ON
20 sec.	OFF	ON	OFF
25 sec.	OFF	ON	ON
30 sec.	ON	ON	OFF

*Note:If the power was turned off,the scan rate will back to the default setting-5 seconds.